




Attention: Any repairs or replacements must be done by a qualified person or an authorized service center.

Local DC: 1-800-676-7777
Factory Warranty: 1-800-207-9259
Fax: 1-800-207-9614
www.grip-rite.com

GRTRN45

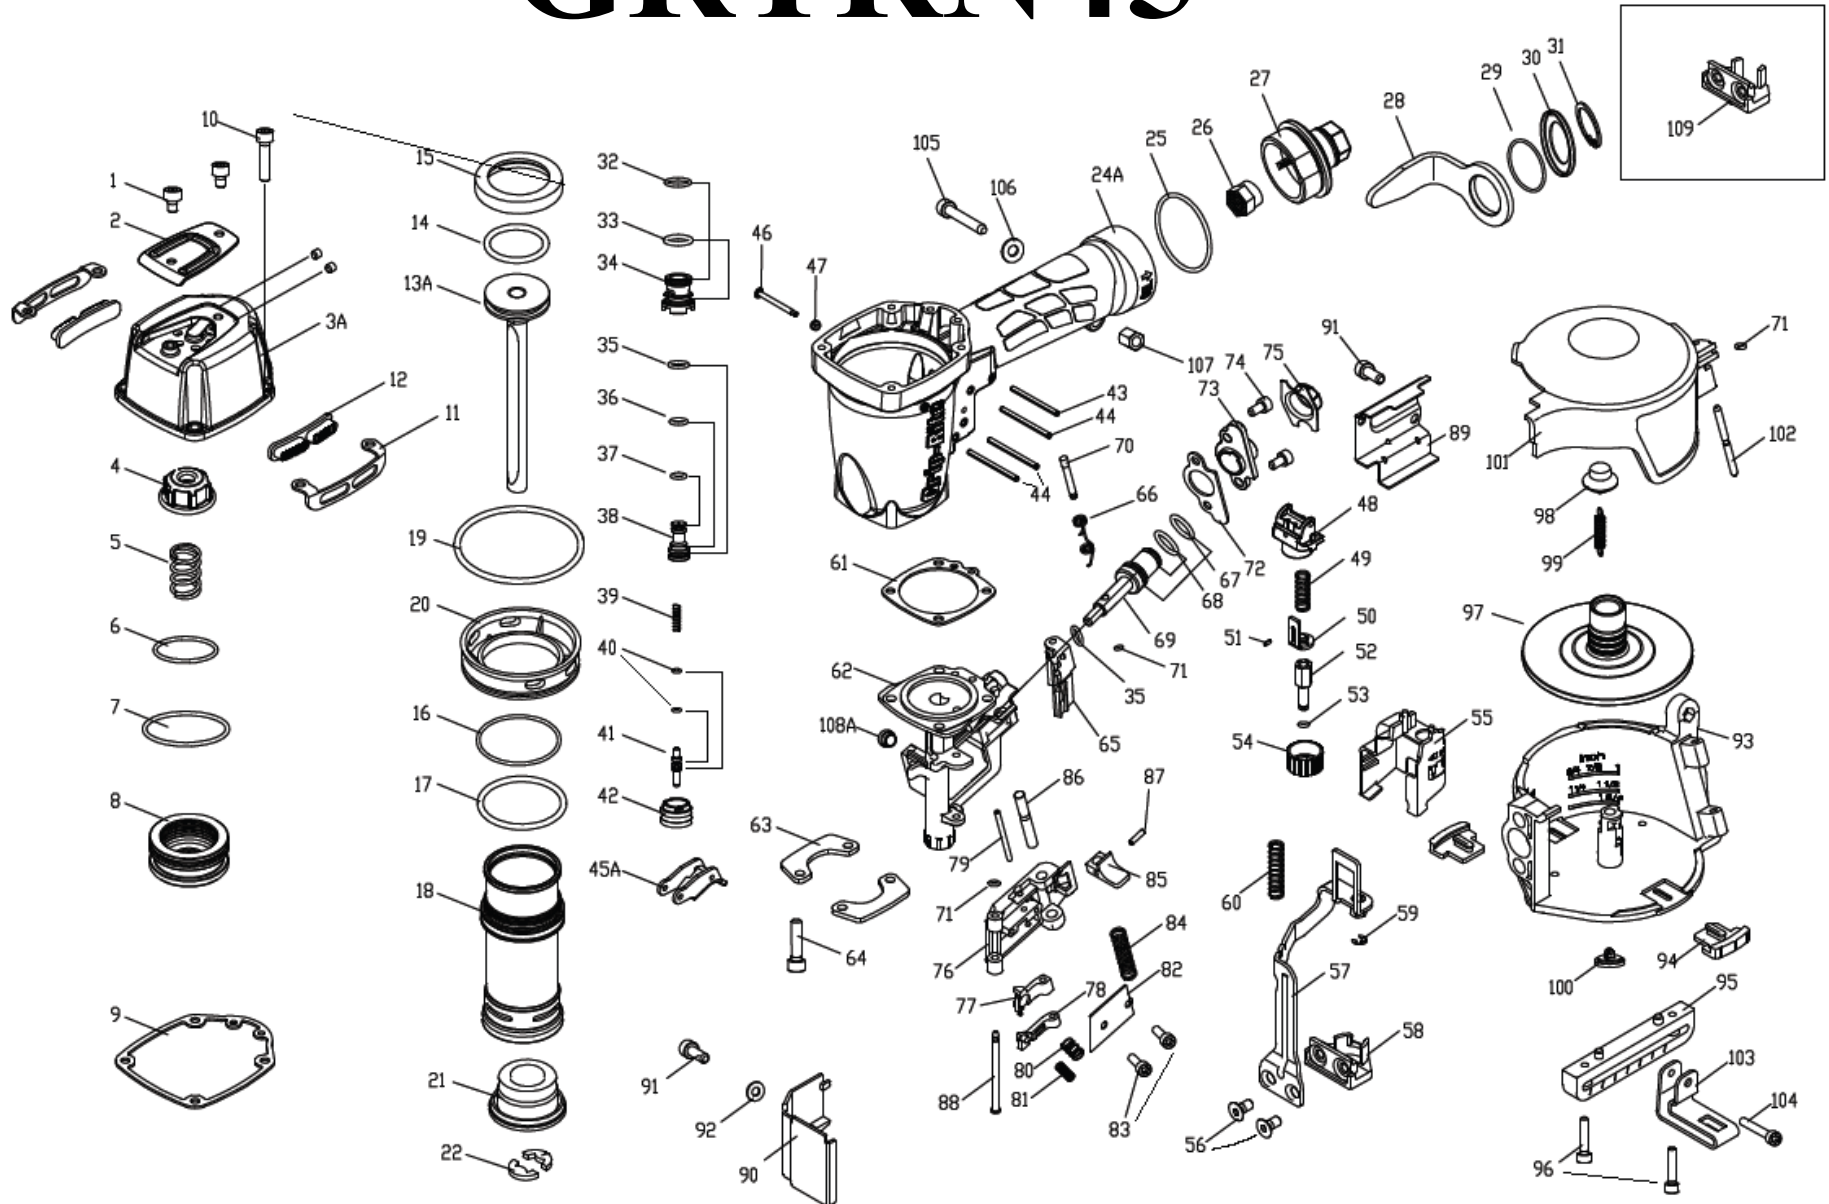

GRTRN45

PARTS LIST

Item#	Part #	Description	Q'ty
1	GRTN3300	Hex.Soc.Hd.Bolt	2
2	GRTN8410	Deflector, Exhaust	1
3A	GRTN8420	Cap Assembly	1
4	GRTN8450	Piston Stopper	1
5	GRTN8460	Spring	1
6	GRTN8960	O-Ring	1
7	GRTN8910	O-Ring	1
8	GRTN8430	Piston,Head Valve	1
9	GRTN8440	Gasket, Cap	1
10	GRTN8880	Hex.Soc.Hd.Bolt	4
11	GRTN8470	Guide Cover	2
12	GRTN8490	Anti.Skid Grip	2
13A	GRTN8520	Driver Assembly	1
14	GRTN8940	O-Ring	1
15	GRTN8480	Seal	1
16	GRTN8970	O-Ring	1
17	GRTN2330	O-Ring	1
18	GRTN8500	Cylinder	1
19	GRTN8990	O-Ring	1
20	GRTN8510	Cylinder Spacer	1
21	GRTN8530	Bumper	1
22	GRTN8370	Driver Guide	1
24A	GRTN8540	Body Assembly	1
25	GRTN4430	O-Ring	1
26	GRTN8380	Muffler	1
27	GRTN8550	End Cap	1
28	GRTN8560	Belt hook - Metal	1
29	GRTN8930	O-Ring	1
30	GRTN4120	Cover,Belt hook	1
31	GRTN4440	C-ring	1
32	GRTN2220	O-Ring	1
33	GRTN2240	O-Ring	1
34	GRTN800	Valve	1
35	GRTN2170	O-Ring	2
36	GRTN6250	O-Ring	1
37	GRTN2100	O-Ring	1
38	GRTN805	Valve Plunger	1
39	GRTN830	Spring	1

Item#	Part #	Description	Q'ty
40	GRTN2230	O-Ring	2
41	GRTN810	Plunger	1
42	GRTN820	Plunger Cap	1
43	GRTN2540	Spring Pin	1
44	GRTN9010	Spring Pin	3
45A	GRTN8570	Trigger Assembly	1
46	GRTN790	Pin Trigger	1
47	GRTN2210	Grommet	1
48	GRTN8790	Guide, Contact Trip	1
49	GRTN8710	Adjusting Spring	1
50	GRTN8650	Contact Trip, Upper Assembly	1
51	GRTN9000	Spring Pin	1
52	GRTN8670	Adjusting Post	1
53	GRTN8950	O-Ring	1
54	GRTN8700	Safety Guide	1
55	GRTN8810	Guide, Contact Trip	1
56	GRTN8900	Hex.Soc.Hd.Bolt	2
57	GRTN8680	Lower Safety Lever Assembly	1
58	GRTN8690	Safety Nose Assembly (Roofing)	1
59	GRTN2670	E-ring	1
60	GRTN8660	Spring, Safety	1
61	GRTN8580	Gasket	1
62	GRTN8590	Nose	1
63	GRTN8640	Guide Bulb	2
64	GRTN8870	Hex.Soc.Hd.Bolt	4
65	GRTN8630	Feed Pawl	1
66	GRTN9040	Spring	1
67	GRTN8980	O-Ring	1
68	GRTN8920	O-Ring	1
69	GRTN8600	Feed Piston	1
70	GRTN8620	Roll Pin	1
71	GRTN2470	O-Ring	3
72	GRTN9150	Gasket	1
73	GRTN8610	Feed Piston Cover	1
74	GRTN5890	Hex.Soc.Hd.Bolt	2
75	GRTN9140	Feed Piston Cover	1
76	GRTN9090	Nail Guide	1
77	GRTN9050	Nail Stopper	1

Item#	Part #	Description	Q'ty
78	GRTN8820	Nail Stopper	1
79	GRTN9020	Spring Pin	1
80	GRTN8830	Spring	1
81	GRTN9110	Spring	1
82	GRTN9100	Nail Guide Cover	1
83	GRTN1870	Hex.Soc.Hd.Bolt	2
84	GRTN9060	Spring	1
85	GRTN9080	Nail Guide Latch	1
86	GRTN9070	Lock Shaft	1
87	GRTN2500	Spring Pin	1
88	GRTN8390	Shaft Pin Nail Guide	1
89	GRTN8840	Debris Shield	1
90	GRTN9120	Safety Cover	1
91	GRTN8860	Hex.Soc.Hd.Bolt	2
92	GRTN6050	Flat Washer	1
93	GRTN8750	Magazine	1
94	GRTN9130	Bushing	2
95	GRTN8760	Gauge Bracket	1
96	GRTN8850	Hex.Soc.Hd.Bolt	2
97	GRTN8780	Nail Holder	1
98	GRTN8720	Tension Post Bushing(Upper)	1
99	GRTN8400	Spring	1
100	GRTN5210	Tension Post Bushing	1
101	GRTN8740	Magazine Cover	1
102	GRTN8730	Shaft Pin Cover	1
103	GRTN8770	Adjusting Plate	1
104	GRTN4020	Hex.Soc.Hd.Bolt	1
105	GRTN8880	Hex.Soc.Hd.Bolt	1
106	GRTN9030	Flat Washer	1
107	GRTN3340	Locknut	1
108A	GRTN1460	Magnet Bushing Assembly	1
109	GRTN8800	Safety Foot (Vinyl)	1

Special Kits

	GRDAK3000	Driver Assembly Kit	1set
	GRRBK3000	Rebuild Kit	1set
	CASERN45	Tool Case	1
	MANRN45	Operators Manual	1
	GRTRK100	Trigger Valve Assembly	1set