




Attention: Any repairs or replacements must be done by a qualified person or an authorized service center.

Local DC: 1-800-676-7777
Factory Warranty: 1-800-207-9259
Fax: 1-800-207-9614
www.grip-rite.com

GRTFC83

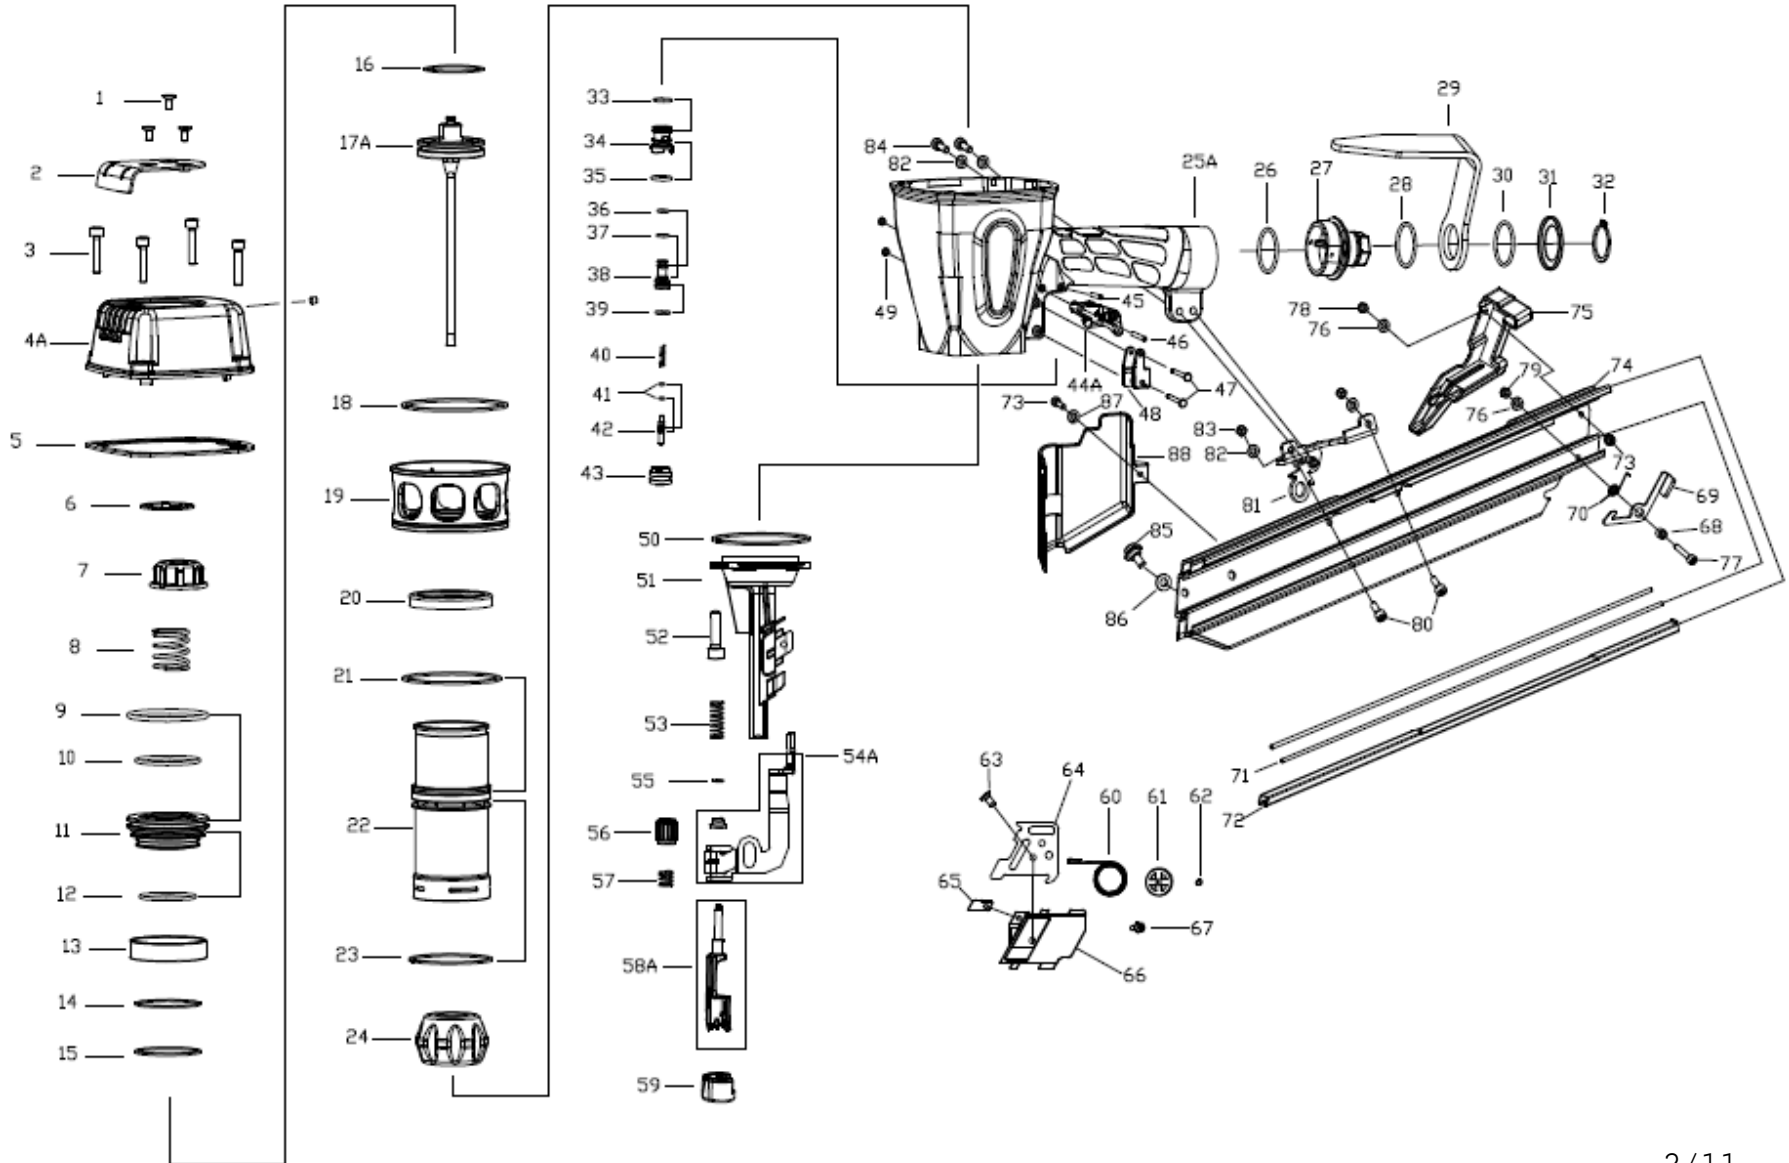

GRTFC83

PARTS LIST

Item#	Part #	Description	Q'ty
1	GRTN7080	Hex.Soc.Hd.Bolt	3
2	GRTN6660	Deflector	1
3	GRTN7060	Hex.Soc.Hd.Bolt	4
4A	GRTN6670	Cap Assembly	1set
5	GRTN6680	Gasket, Cap	1
6	GRTN220	Top Bumper, Washer	1
7	GRTN6690	Piston Stopper	1
8	GRTN6710	Spring	1
9	GRTN2420	O-Ring	1
10	GRTN2160	O-Ring	1
11	GRTN6700	Piston Head Valve	1
12	GRTN7010	O-Ring	1
13	GRTN6620	Head Valve P2	1
14	GRTN6610	Seal, Head Valve P2	1
15	GRTN6630	Retaining Ring	1
16	GRTN2200	O-Ring	1
17A	GRTN7490	Driver Assembly	1set
18	GRTN2460	O-Ring	1
19	GRTN250	Cylinder Hold Down	1
20	GRTN240	Seal	1
21	GRTN2430	O-Ring	1
22	GRTN6720	Cylinder	1
23	GRTN2190	O-Ring	1
24	GRTN6740	Bumper	1
25A	GRTN6750	Body Assembly	1set
26	GRTN4430	O-Ring	1
27	GRTN6760	End Cap	1
28	GRTN6970	Washer, Belt Hook	1
29	GRTN6770	Belt hook	1
30	GRTN6990	O-Ring	1

Item#	Part #	Description	Q'ty
31	GRTN4180	Spring Plate	1
32	GRTN4190	C-ring	1
33	GRTN2220	O-Ring	1
34	GRTN800	Valve	1
35	GRTN2240	O-Ring	1
36	GRTN2100	O-Ring	1
37	GRTN6250	O-Ring	1
38	GRTN805	Valve Plunger	1
39	GRTN2170	O-Ring	1
40	GRTN830	Spring	1
41	GRTN2230	O-Ring	2
42	GRTN810	Plunger	1
43	GRTN820	Plunger Cap	1
44A	GRTN6780	Trigger Assembly	1set
45	GRTN2530	Spring Pin	1
46	GRTN2550	Spring Pin	1
47	GRTN790	Trigger Pin	2
48	GRTN6960	Guide,Safety Lever	1
49	GRTN2210	Grommet	2
50	GRTN7000	O-Ring	1
51	GRTN7500	Nose	1
52	GRTN2010	Hex.Soc.Hd.Bolt	4
53	GRTN7510	Spring,Safety	1
54A	GRTN7520	Upper Safety Lever Assy.	1
55	GRTN2660	E-ring	1
56	GRTN6840	Adjusting Nut	1
57	GRTN6850	Adjusting Spring	1
58A	GRTN6820	Lower Safety Lever Assy.	1set
59	GRTN1530	Rubber Pad	1
60	GRTN6640	Spiral Spring	1

Item#	Part #	Description	Q'ty
61	GRTN6890	Roller	1
62	GRTN7070	Pin	1
63	GRTN7530	Hex.Soc.Hd.Bolt	1
64	GRTN7540	Pusher	1
65	GRTN7550	Stopper	1
66	GRTN7560	Carriage	1
67	GRTN7040	Hex.Soc.Hd.Bolt	1
68	GRTN7590	Spacer	1
69	GRTN7580	Magazine lock	1
70	GRTN7570	Torsion spring	1
71	GRTN7600	Nail Guide Liner	2
72	GRTN7610	Wear Rail	1
73	GRTN2690	Hex.Soc.Hd.Bolt	2
74	GRTN7620	Magazine	1
75	GRTN7630	Magazine cover	1
76	GRTN7020	Flat Washer	2
77	GRTN4420	Hex.Soc.Hd.Bolt	1
78	GRTN2710	Cap Locknut	1
79	GRTN2060	Locknut	1
80	GRTN6070	Hex.Soc.Hd.Bolt	2
81	GRTN7640	Bracket	1
82	GRTN6050	Flat Washer	4
83	GRTN3340	Locknut	2
84	GRTN4020	Hex.Soc.Hd.Bolt	2
85	GRTN7090	Spec Hex.Bolt	1
86	GRTN7030	Washer	1
87	GRTN7130	Flat Washer	1
88	GRTN7650	Safety cover	1

Special Kits

	GRDAK2800	Driver Assembly Kit	1set
	GRRBK2800	Rebuild Kit	1set
	GRTF83MAN	Operators Manual	1
	GRTN4470	Sequential Trigger	1set
	GRTRK100	Trigger Valve Assembly	1set