


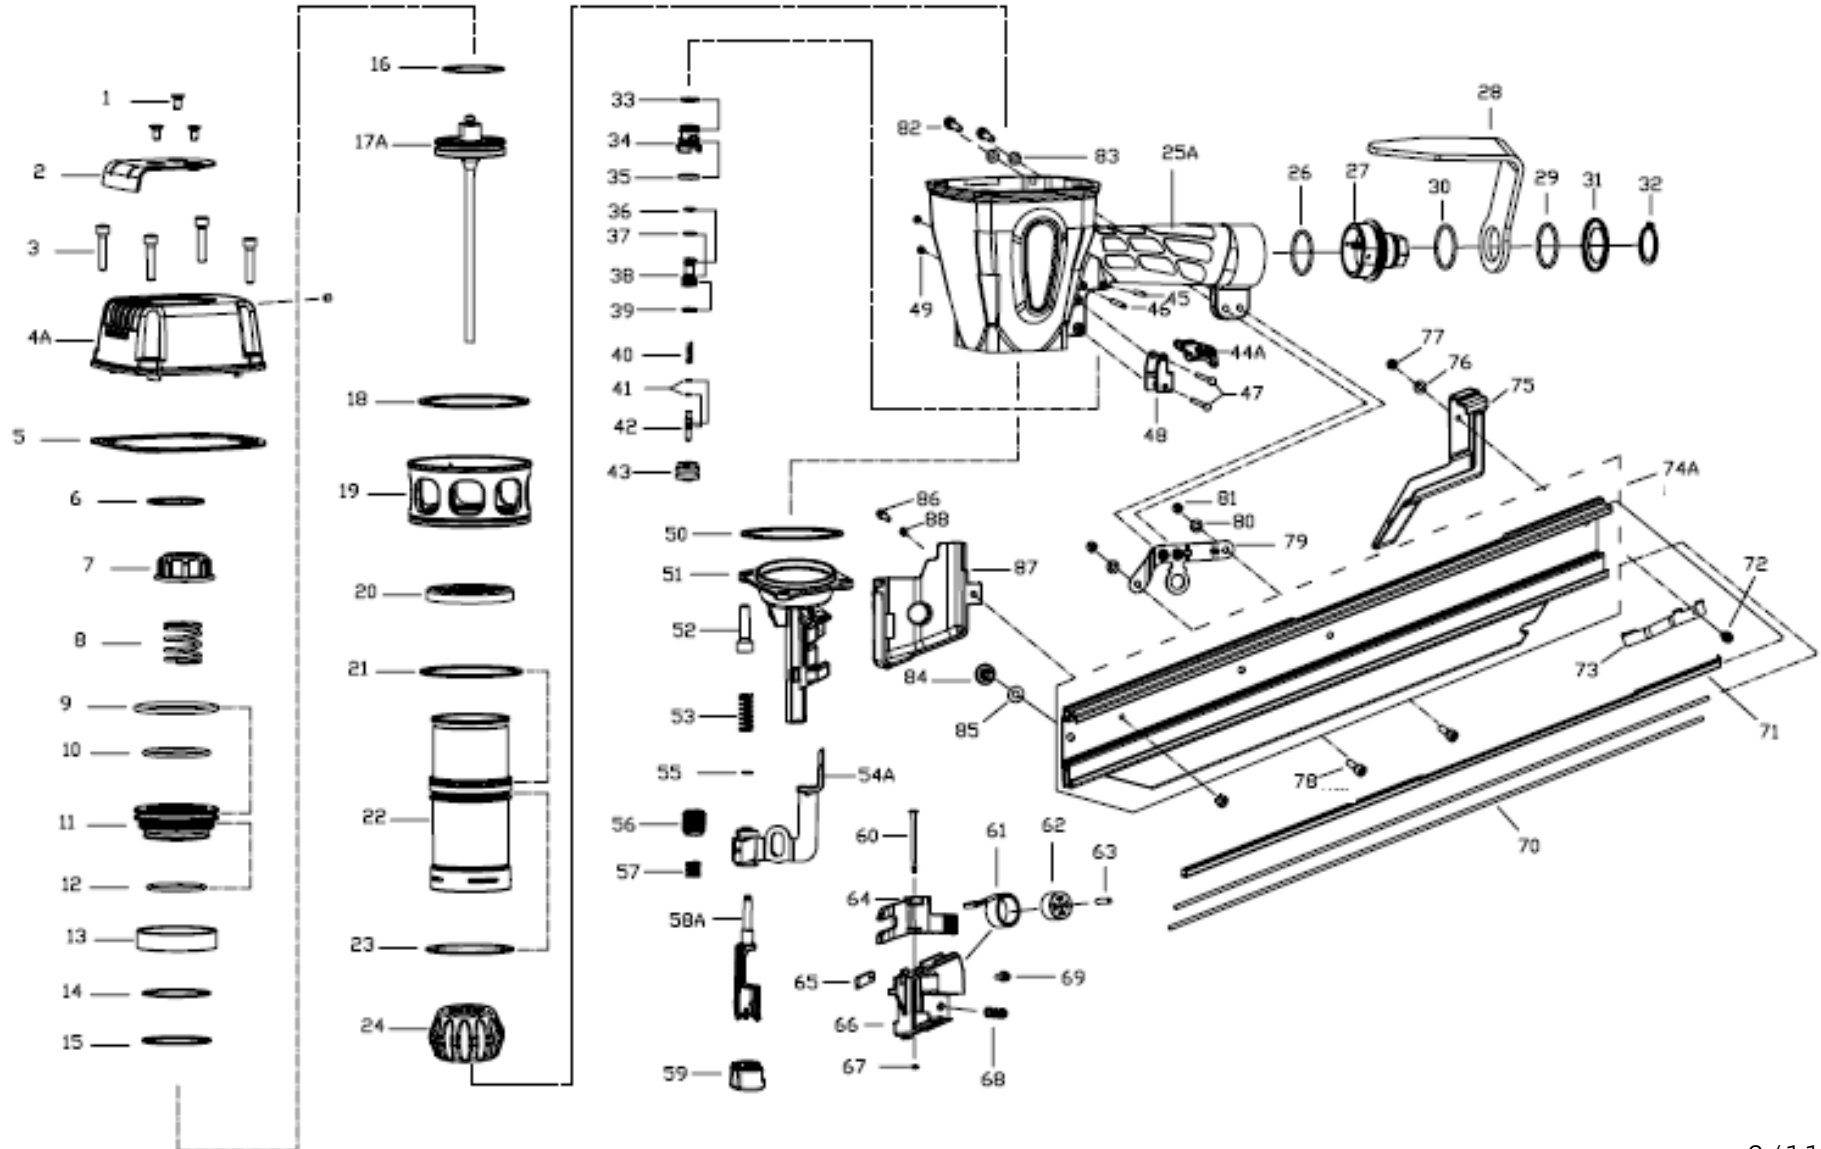

Attention: Any repairs or replacements must be done by a qualified person or an authorized service center.

Local DC: 1-800-676-7777
Factory Warranty: 1-800-207-9259
Fax: 1-800-207-9614
www.grip-rite.com

GRTR83



GRTFR83

PARTS LIST

Item#	Part #	Description	Q'ty
1	GRTN7080	Hex.Soc.Hd.Bolt	3
2	GRTN6660	Deflector	1
3	GRTN7060	Hex.Soc.Hd.Bolt	4
4A	GRTN6670	Cap Assembly	1 set
5	GRTN6680	Gasket, Cap	1
6	GRTN220	Top Bumper, Washer	1
7	GRTN6690	Piston Stopper	1
8	GRTN6710	Spring	1
9	GRTN2420	O-Ring	1
10	GRTN2160	O-Ring	1
11	GRTN6700	Piston Head Valve	1
12	GRTN7010	O-Ring	1
13	GRTN6620	Head Valve P2	1
14	GRTN6610	Seal, Head Valve P2	1
15	GRTN6630	Retaining Ring	1
16	GRTN2200	O-Ring	1
17A	GRTN6730	Driver Assembly	1set
18	GRTN2460	O-Ring	1
19	GRTN250	Cylinder Hold Down	1
20	GRTN240	Seal	1
21	GRTN2430	O-Ring	1
22	GRTN6720	Cylinder	1
23	GRTN2190	O-Ring	1
24	GRTN6740	Bumper	1
25A	GRTN6750	Body Assembly	1set
26	GRTN4430	O-Ring	1
27	GRTN6760	End Cap	1
28	GRTN6770	Belt hook	1
29	GRTN6990	O-Ring	1
30	GRTN6970	Washer, Belt Hook	1

Item#	Part #	Description	Q'ty
31	GRTN4180	Spring Plate	1
32	GRTN4190	C-ring	1
33	GRTN2220	O-Ring	1
34	GRTN800	Valve	1
35	GRTN2240	O-Ring	1
36	GRTN2100	O-Ring	1
37	GRTN6250	O-Ring	1
38	GRTN805	Valve Plunger	1
39	GRTN2170	O-Ring	1
40	GRTN830	Spring	1
41	GRTN2230	O-Ring	2
42	GRTN810	Plunger	1
43	GRTN820	Plunger Cap	1
44A	GRTN6780	Trigger Assembly	1set
45	GRTN2530	Spring Pin	1
46	GRTN2550	Spring Pin	1
47	GRTN790	Trigger Pin	2
48	GRTN6960	Guide,Safety Lever	1
49	GRTN2210	Grommet	2
50	GRTN7000	O-Ring	1
51	GRTN6790	Nose	1
52	GRTN2010	Hex.Soc.Hd.Bolt	4
53	GRTN6810	Spring,Safety	1
54A	GRTN6800	Upper Safety Lever Assy.	1set
55	GRTN2660	E-ring	1
56	GRTN6840	Adjusting Nut	1
57	GRTN6850	Adjusting Spring	1
58A	GRTN6820	Lower Safety Lever Assy.	1set
59	GRTN1530	Rubber Pad	1
60	GRTN6600	Door Hinge Pin	1

Item#	Part #	Description	Q'ty
61	GRTN6640	Spiral Spring	1
62	GRTN6890	Roller	1
63	GRTN7070	Pin	1
64	GRTN6900	Pusher	1
65	GRTN6940	Safety Lock-Out	1
66	GRTN6910	Carriage	1
67	GRTN2210	Grommet	1
68	GRTN6650	Spring	1
69	GRTN7040	Hex.Soc.Hd.Bolt	1
70	GRTN6870	Nail Guide Liner	2
71	GRTN6880	Nail Guide Liner	1
72	GRTN7050	Hex.Soc.Hd.Bolt	1
73	GRTN6930	Nail Stop Plate	1
74A	GRTN6860	Magazine Assembly	1set
75	GRTN6950	Magazine Cover	1
76	GRTN7020	Flat Washer	1
77	GRTN2710	Cap Locknut	1
78	GRTN6070	Hex.Soc.Hd.Bolt	2
79	GRTN6920	Bracket	1
80	GRTN6050	Flat Washer	2
81	GRTN3340	Locknut	2
82	GRTN4020	Hex.Soc.Hd.Bolt	2
83	GRTN6050	Flat Washer	2
84	GRTN7090	Hex.Soc.Hd.Bolt	1
85	GRTN7030	Flat Washer	1
86	GRTN7040	Hex.Soc.Hd.Bolt	1
87	GRTN6830	Safety Cap	1
88	GRTN7130	Flat Washer	1

Special Kits

	GRDAK2300	Driver Assembly Kit	1set
	GRRBK2300	Rebuild Kit	1set
	GRTF83MAN	Operators Manual	1
	GRTN4470	Sequential Trigger	1set
	GRTRK100	Trigger Valve Assembly	1set